# **PLATELET Gp Screen**

Kit for platelet glycoprotein quantitation

Kit for 10 determinations Ref. 7008



コスモ・ハイオ株式会社



# For Research Use Only.

Not for Use in Diagnostic Procedures.

#### 1 INTENDED USE

Single color flow cytometric analysis of the platelet glycoproteins GpIlla, Gplb and Gpla. The number of antigenic sites are determined by converting the fluorescence intensity into corresponding number of sites per platelet based on a calibrated bead standard curve.

#### **2 EXPECTED VALUES**

The cytometric analysis was performed on Coulter EPICS® XL-MCL cytometer. These values are given as an indication only. It is recommended that each laboratory establishes its own normal values from a local population of normal donors.

	Citrate
GpIIIa (CD61)	53 +/- 12
Gplb (CD42b)	38 +/- 11
Gpla (CD49b)	5 +/- 2.8

These values are expressed as number of Gp molecules per platelet ( $x 10^3$ )

## **3 REAGENTS**

• Reagent 1: 1 x 15 mL vial, diluent, 10 fold concentrated.

Reagent 2a: 1 x 200 µL vial, anti GpIlla MAb (CD61).

• Reagent 2b: 1 x 200 µL vial, anti Gplb MAb (CD42b).

• Reagent 2c: 1 x 200 µL vial, anti Gpla MAb (CD49b).

Reagent 3: 1 x 400 μL vial, calibrated bead suspension, ready for

use. The beads are coated with increasing and

accurately known quantities of mouse

immunoglobulins IgG. The number of determinants coated on each bead population is indicated in the

calibration flyer inserted in the kit.

Reagent 4: 1 x 800 µL vial, staining reagent, polyclonal antibody

anti mouse IgG-FITC.

#### WARNING

All reagents contain sodium azide as a preservative. Reagents containing sodium azide should be discarded with care to prevent the formation of explosive metallic azides. When dumping waste materials into sinks, use copious quantities of water to flush plumbing thoroughly

### **4 REAGENT PREPARATION AND STORAGE**

Intact kits and contents remain stable until the expiration date printed on the box label, when stored at 2-8 °C.\*

 Reagent 1 \*\*: Stability after opening: 2 months at 2-8 °C when free of contamination.

Prepare a **1:10 dilution** with distilled water. Prepare the appropriate volume required for the series to be tested.

Stability after dilution: 15 days at 2-8 °C.

• Reagents 2a, 2b, 2c and 4: Ready for use.

Stability after opening: 2 months at 2-8 °C when free of contamination.

Reagent 3: Ready for use after resuspension by vortexing for 5 seconds.

Stability after opening: 2 months at 2-8 °C when free of contamination.

Notes: \*: do not freeze the kit.

\*\*the presence of crystals does not affect the quality of the reagent. Incubate at 37 °C until the crystals are completely dissolved.

### **5 SPECIMEN COLLECTION AND TREATMENT**

#### • Sample collection:

- Use non-wettable plastic blood collection tubes.
- In order to maintain platelet integrity, exercise utmost care to avoid platelet activation during the collection procedure.
- Anticoagulant : trisodium citrate 0.109 M or 0.129 M (using a ratio 9:1 volumes).

### • Sample storage:

- Blood sample must be treated within **8 hours** after collection. Blood is stored at room temperature before testing (18-25 °C).
- The test is performed either on citrated whole blood or on platelet rich plasma (PRP).

### **6 PROCEDURE**

Note: For good results exercise great care in the pipetting of small reagent volumes (20  $\mu$ L) by depositing them at the bottom of the test tubes.

All reagents must be at room temperature.

# 6.1. Reagent Tubes Setup

Take 5 plastic tubes; mark them T1 to T5. Set the tubes in a rack. Perform the following pipetting steps:

- Tube T1: pipette **50 \muL** of citrated whole blood (alternatively pipette 25  $\mu$ L of PRP and add 25  $\mu$ L of diluted Reagent 1).

Add 150 µL of diluted Reagent 1.

Homogenize using a vortex for 1 to 2 seconds.

- Tube T2: pipette 20 µL Reagent 2a (anti GpIIIa MAb).
- Tube T3: pipette 20 µL Reagent 2b (anti Gplb MAb).
- Tube T4: pipette 20 µL Reagent 2c (anti Gpla MAb).
- Tube T5: pipette 40  $\mu$ L Reagent 3 (vortex vial well before pipetting).

# 6.2. Immuno-labelling of Samples

To each of tubes T2, T3 and T4:

- Add 20 µL diluted sample (Tube T1).
- Homogenize the 3 tubes using a vortex for 1 to 2 seconds.
- Incubate all tubes at room temperature for 10 minutes.

### 6.3. Fluorescent Staining

To each of tubes T2 to T5:

- Add 20 µL Reagent 4.
- Homogenize the 4 tubes using a vortex for 1 to 2 seconds.
- Incubate at room temperature for **10 minutes**.
- Add 2 mL diluted Reagent 1.
- Homogenize the 4 tubes using a vortex for 1 to 2 seconds.

Thus treated, the contents of all tubes may be stored for **2 hours** at **2-8 °C** before cytometric analysis.

### 6.4. Cytometric analysis

Refer to the Operator's Manual of the cytometer for instructions on how to perform cytometric readings.

The selected Mean Fluorescence Intensity (MFI) statistic is the geometric mean, Mn(x) or GeoMean.

Notes : the Beckman Coulter softwares Expo™ 32, CXP and RXP have an option baseline offset. This should be set OFF.

Vortex each tube before analysis.

# • Calibration analysis: Tube T5 (Figs 1)

Create a FS LOG vs SS LOG cytogram. Add a discriminator on FS Log to minimize the artefactual background. Set up a gate "CAL" around the main single bead population (Fig. 1a).

Create a FL1 LOG histogram gated by the "CAL" window.

For optimum analysis conditions, the peak of the third bead fluorescence intensity (FL1) must be set at the beginning of the fourth decade.

To achieve this adjust the FL1 PMT voltage.


The "A" cursor must include the first channel.

For a correct analysis, at least 8,000 beads must be gated on the window "CAL".

Fig.1b: Cursor settings in

Note the MFI for each of 3 fluorescence peaks (Fig. 1b : A, B and C cursors) corresponding to the 3 calibration beads.

Fig. 1a: Calibration cytogram

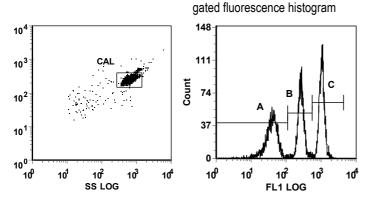

## Sample analysis: tubes T2 to T4 (Figs 2)

# Do not change the acquisition procedure for FL1 (PMTv).

On the FS LOG x SS LOG cytogram (Fig. 2a) platelets are isolated from other whole blood cells by an analysis region " PLT ".

Check that the discriminator setting does not cut the platelet cloud.

# Analyse at least 3,000 events on the window "PLT".

In the corresponding gated FL1 LOG histogram, note the mean fluorescence intensity of the positive peak of each assay (Fig. 2b).

Fig. 2a: Whole blood cytogram and platelet window gating



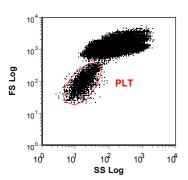


Fig. 2b : CD61 immuno-labelling, cursor settings

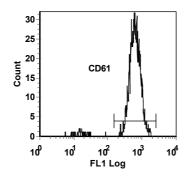

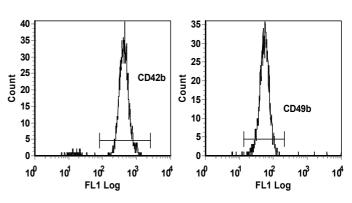

#### 7 RESULTS

Computer data analysis or graphic data analysis.

### 7.1. Computer data analysis:


The result treatment is easily performed using a calculation template available upon request from the BioCytex technical department.

### 7.2 Graphic data analysis:

Plot the LOG<sub>10</sub> of the MFI calibration values for the 3 calibration beads on the abscissa (x-axis), and their corresponding LOG<sub>10</sub> number of monoclonal antibody molecules as indicated on the calibration flyer, on the ordinate (y-axis).

Draw the optimal calibration curve of the type  $LOG_{10}(ABC) = a \times LOG_{10}(MFI) + b$ . Interpolate the  $LOG_{10}$  of the MFI values of the sample tubes on the calibration curve and read directly their corresponding numbers of bound Mab molecules (ABC : Antibody Binding Capacity).

# Example of calibration curve:

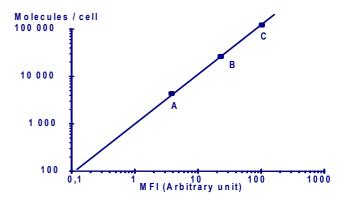

# **REFERENCES**

- 1- Schlossman et al. eds Leucocyte Typing V, Oxford Univ. Press 1995, 1309-1315, 1615-1616.
- 2- Schmitz G. et al. Thromb. Haemost. 1998. 79:885-896.
- 3- Martin K. et al. J Thromb Haemost 2003; 1:2643-52.
- 4- Ajzenberg N. et al. Arterioscler Thromb Vasc Biol. 2005; 25:1756-1760.

BIOCYTEX 140 ch. ARMEE D'AFRIQUE 13010 MARSEILLE FRANCE

TEL: +33 (0) 4 96 12 20 40 FAX: +33 (0) 4 91 47 24 71